








































































# COVER RX INSTALLATION INSTRUCTIONS

**GALAXY SPAS**  
Heal your Body, Heal your Mind

First inspect the included (2) hardware bags and all other parts (see figure 1) to make sure there is nothing missing.

## Hardware and parts list:

- A   (2) of each - attaches main body to pivot arm tabs
- B                                 (2) total (B and C are identical) - connects to air shock  
(B is Pre-installed)
- C                                 (2) of each - attaches main body to support legs
- D  (2) Pins
- E     (4) Screws + (2) Nuts - attaches baseplate to support legs

G - (1) Gas Shock

H - (1) Base Plate

I - (2) Support Legs

J - (1) Pivot Arm

K - (1) Main Body

L - (2) Short U-Arm Elbows

M - (2) Long U-Arm Elbows


N - (2) U-Arm Spacers

P - (2) Bumper Knobs


Also includes all tools needed  
box wrench and allen wrench




Figure 1 - Connection reference overview

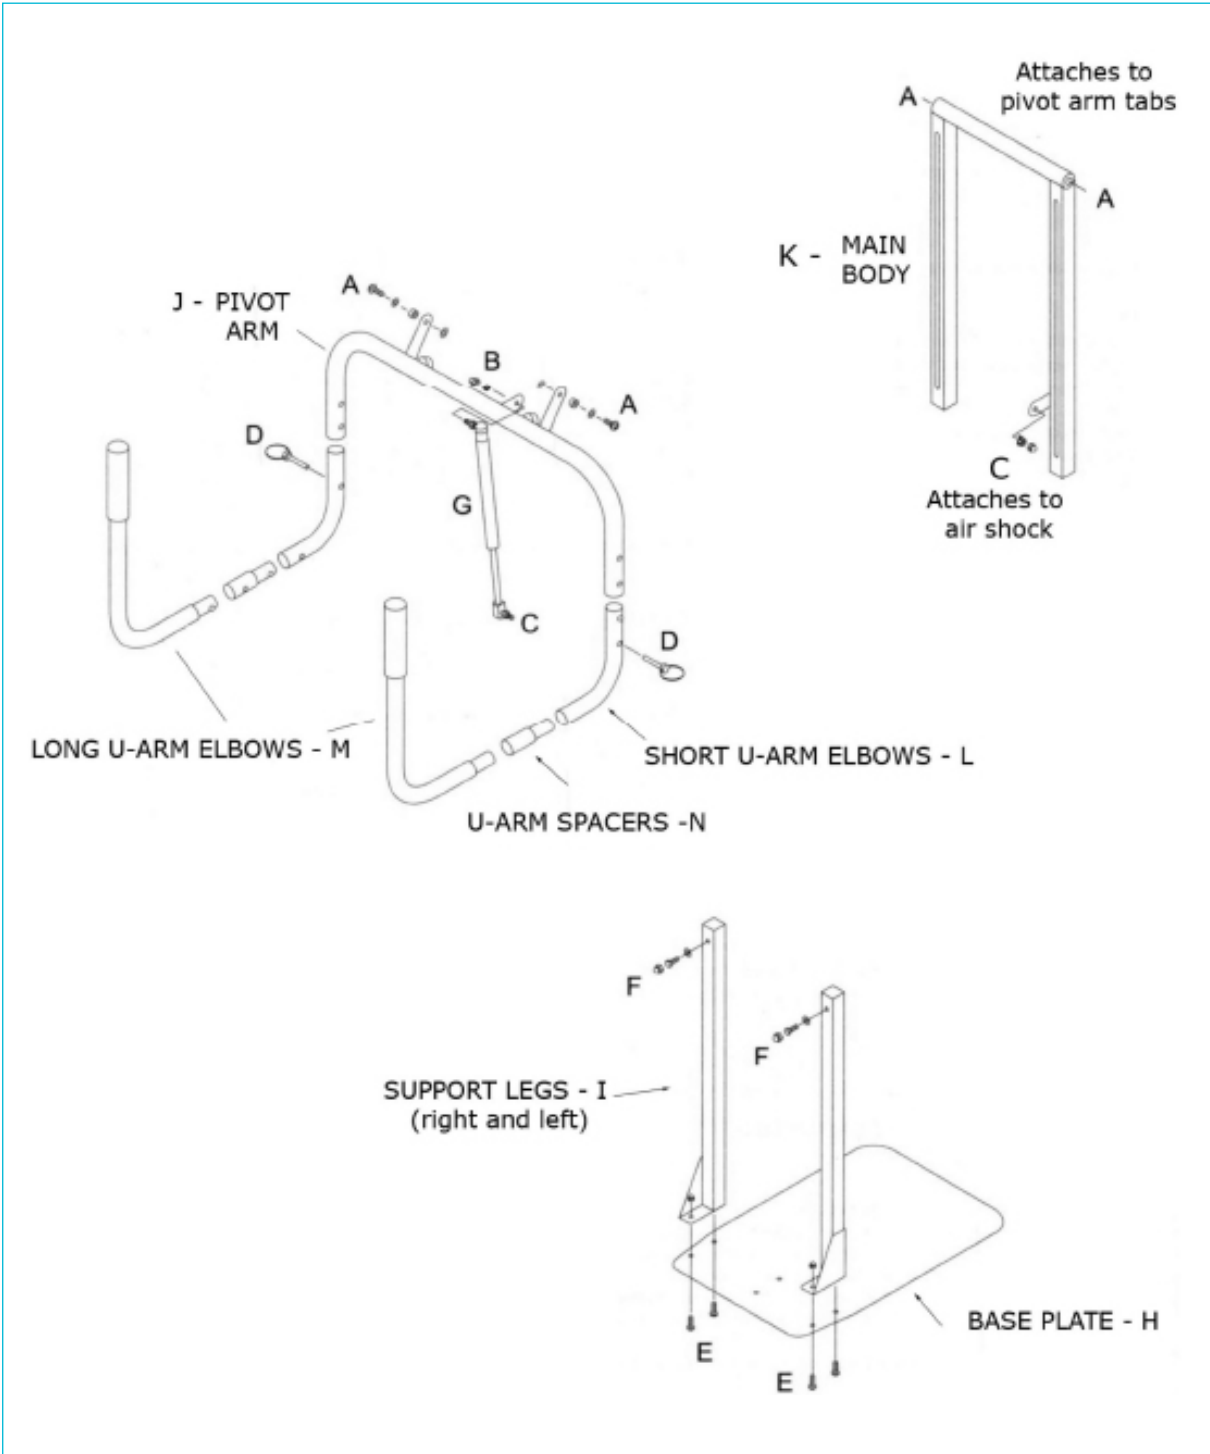


- 1 Attach base plate to support legs with 4 screws (E). For each leg, one screw threads directly into leg and the other uses a rounded nut to secure. Set aside base assembly.

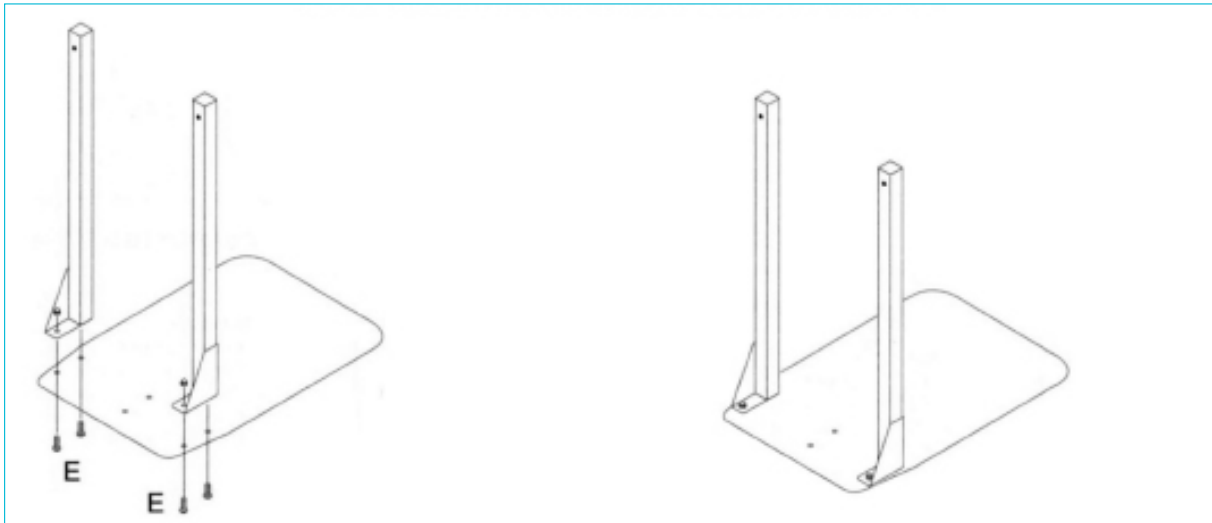


- 2 Attach pivot arm to main body (A).

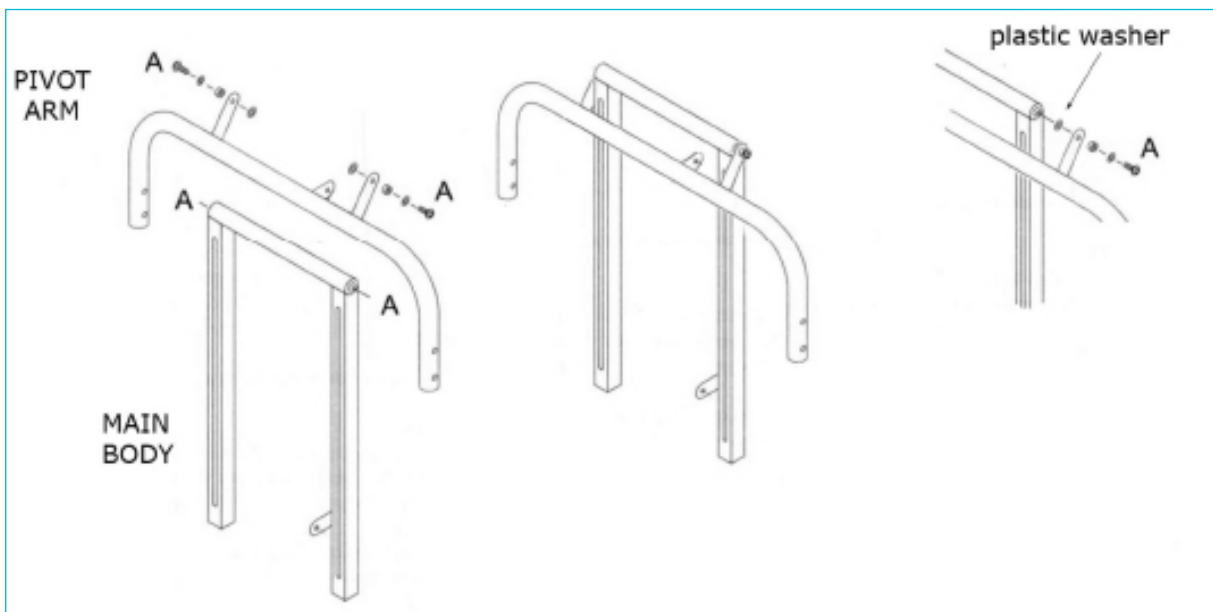


- 3 Slide pivot arm/main body over support legs/main body. Insert screws (F) through channel in main body into hole near top of support legs. Leave loose for now, they will be tightened later to adjust height.

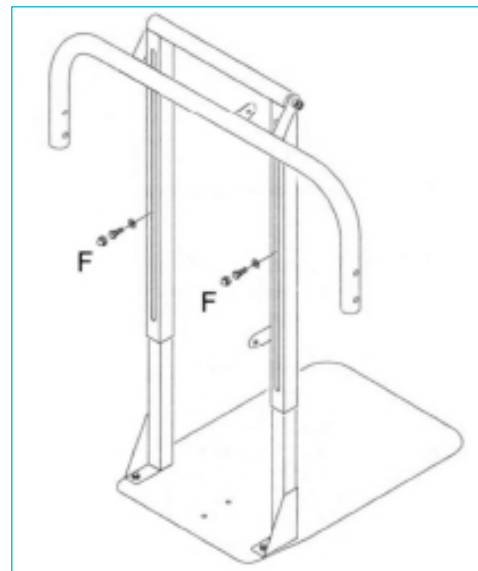

- 4 Assemble the U-arms. Use the included small spacer if your cover is above average thickness. If you do not need the spacer, remove it as it will cause unwanted 'wobble.'

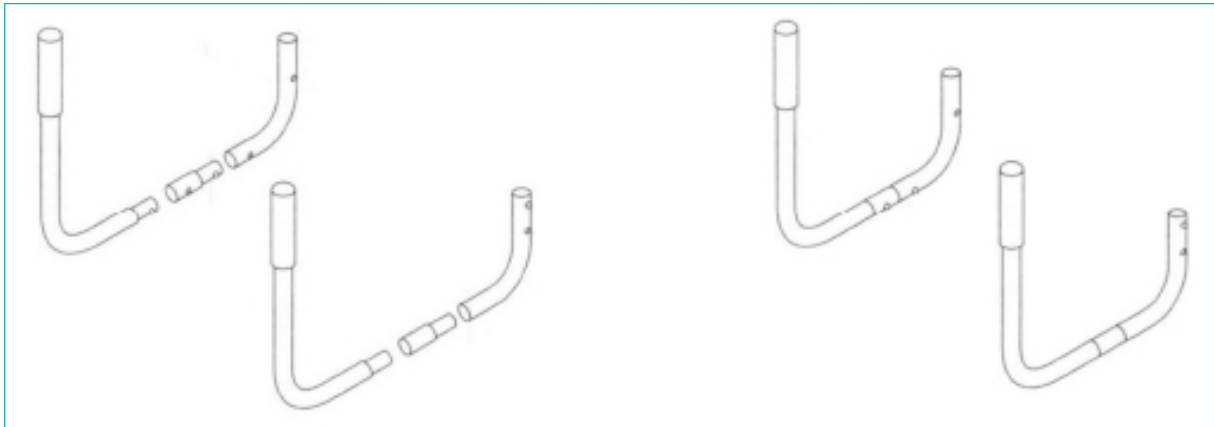


- 5 Slide U-Arms into pivot arm; align spring button so that it locks in place and insert pin all the way through hole and channel.

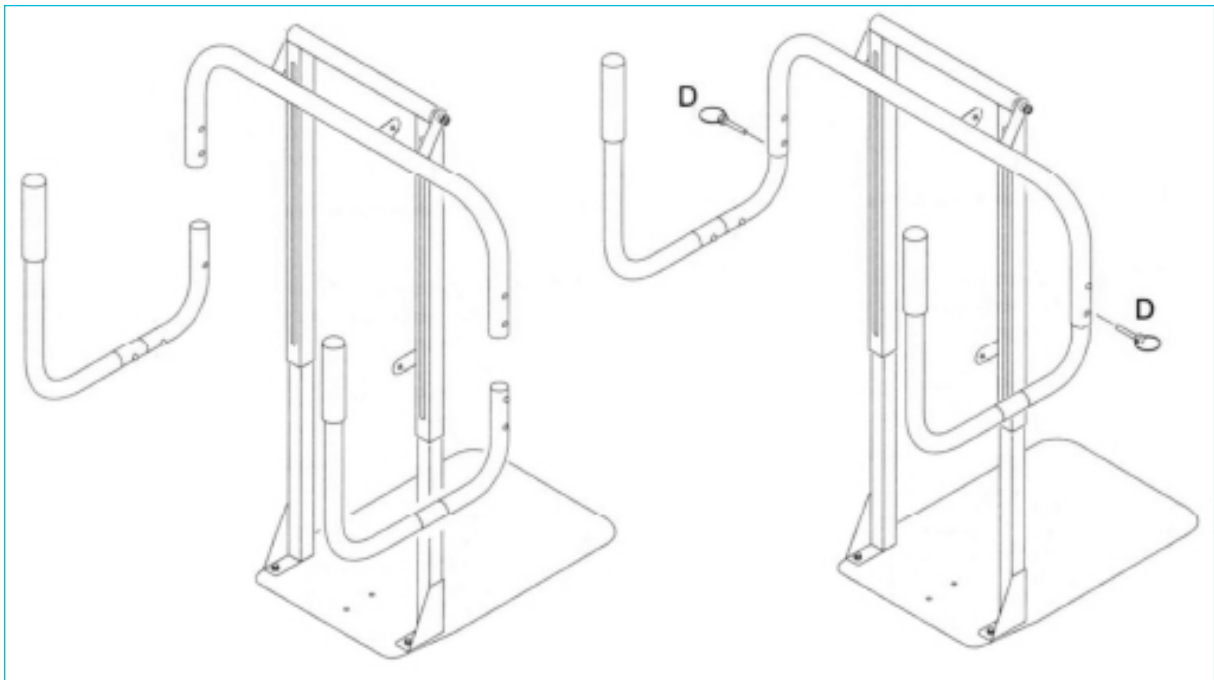

- 6 Attach the ball stud with the lock nut to the tab on the right leg of the main body. This ball stud should face the opposite direction as the pre-installed ball stud on the back of pivot arm.

Attach gas shock to ball studs at C and B.

- 7 Install bumper knobs into pivot arm\*.

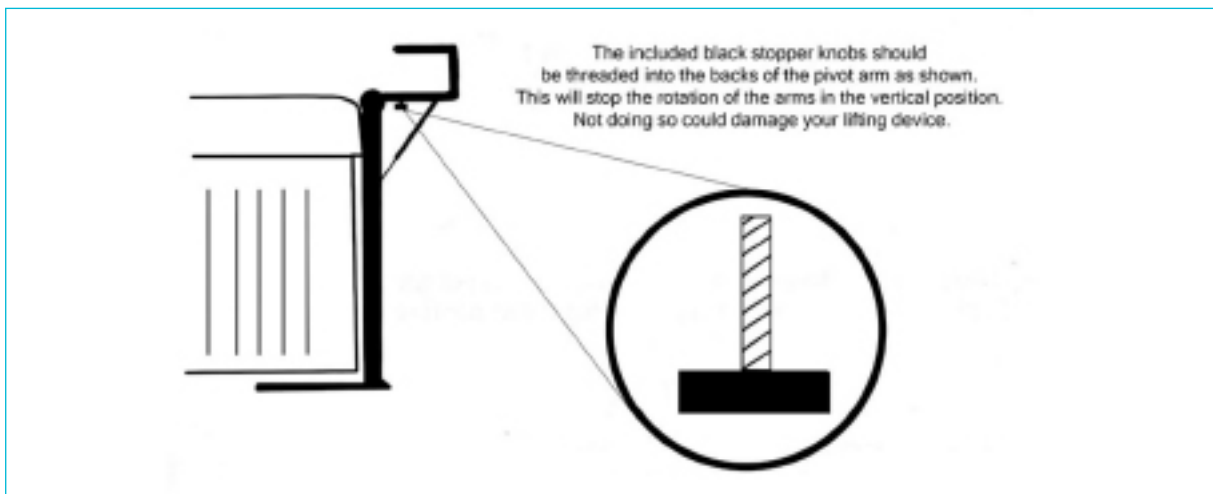

- 8 Slide sure lift (base plate) under spa. Leave 12mm of space between the sure lift and your spa.
- 9 Tighten all screws and adjust height (F).

The base of the U-arms should be flush with the top of the acrylic (see figure in step 7) to ensure an easy slide in to the lifter.

**Figure 2 - Attaching U-arms to pivot arm (Step 5)**

